


# ArtixScanDI 2015c

## Two-way Document Scanner

Flatbed and Built-in Automatic Document Feeder Equipped  
Smart Duplex Perfect for Legal, Real Estate and SOHO Office



OCR engine powered by **ABBYY**

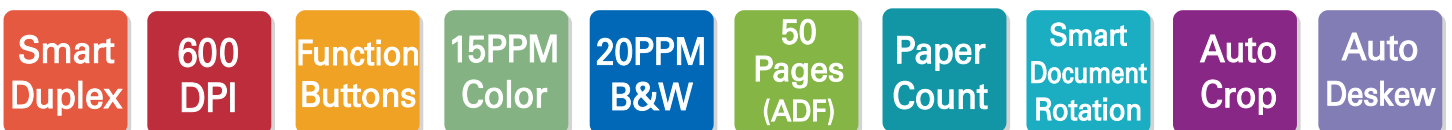


## Smart scanning with 3 programmable buttons

The function buttons, F1 to F3, of ArtixScanDI 2015c are programmable. Depending on your own preferences, you may define those function buttons and use them as hot keys to access scanning jobs.



## ScanWizard DI Software Makes Scanning Easy but Powerful

**Smart duplex** provides a dual scanning ability that can double your productivity.

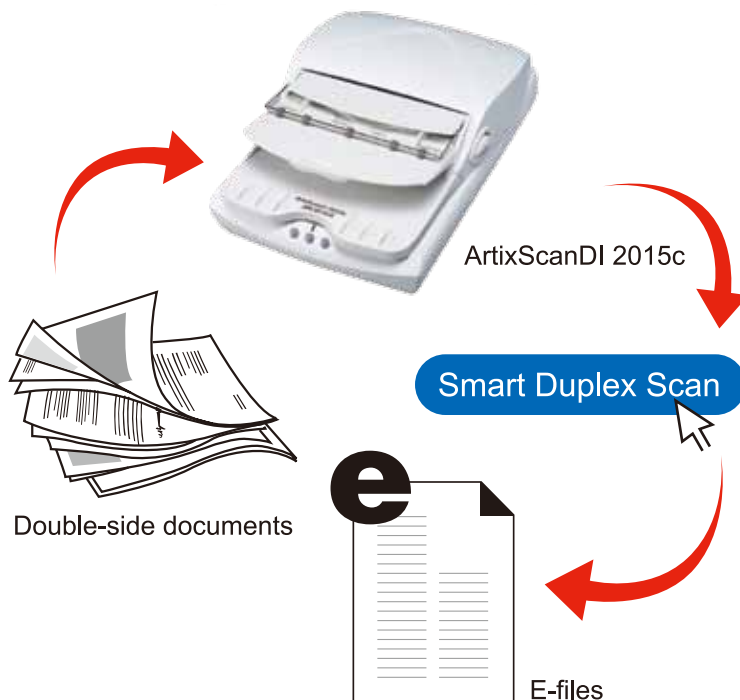

**Paper Count** function allows users to keep track of all scan actions from both flatbed and ADF, helping to estimate when you may need to apply maintenance and service to your scanner, making more effective use of your scanner.

**Auto Document Rotation** function enables the scanner to rotate every saved files in a readable direction automatically based on a specific OCR language selected.



**Remove Punch Hole** function automatically detects the location of the punch holes on the scanned documents and fills them in white.



**Auto-crop** function automatically detects the size of the original image, crops the full scan frame to fit the image, and removes unwanted black borders.



**Color dropout** function drops out red, green and blue colors from problematic color document to pursue clearer and more accurate form.



**Auto-deskew** function automatically corrects distorted images for proper alignment.



**Remove Blank Page** function automatically detects blank pages and removes when scanning a stack of documents. It is quite helpful especially when users are scanning double-sided documents and some of the pages only have text on the front side.

### Specifications

Scanner Type  
Desktop color flatbed scanner with ADF  
Bit Depth  
Input: 48-bit color; 16-bit grayscale  
Output: 24-bit color; 8-bit grayscale  
Scanning Mode  
Simplex  
Resolution  
100, 150, 200, 300 and 600 dpi  
Flatbed Scanning Area  
8.5" x 11.7" / 216 mm x 297 mm

ADF Capacity  
50 pages  
ADF Document Size  
Minimum: A6 (4.14" x 5.83" / 105 x 148 mm)  
Maximum: 8.5" x 25" / 216 mm x 635 mm  
Dimensions (L x W x H)  
17" x 11.4" x 5.7" / 432 mm x 290 mm x 145 mm  
Weight  
10.6 lbs. / 4.8 kg  
Environment  
Operating Temperature: 50°F ~ 95°F / 10°C to 35°C  
Relative Humidity 20% to 85%

### System Requirements

- CD-ROM drive (for installing software)
- Color monitor with 24-bit color capability
- 256 MB RAM or more

#### PC and compatibles

- Pentium III PC or higher with USB or Hi-Speed USB (USB 2.0) port
- Microsoft Windows 2000 / XP / Vista / Windows 7

### Included Software

- ScanWizard DI
- InterVideo MediaOne Gallery
- ABBYY FineReader Sprint OCR
- Adobe Acrobat Reader

*For more information about this product, please contact your local Microtek sales or dealers.*



© 2010 Microtek, Microtek, ScanMaker, ArtixScan and ScanWizard are trademarks or registered trademarks of Microtek International, Inc. All other brands, product names and logos herein are trademarks or registered trademarks of their respective holders. Specifications, software bundles and accessories are subject to change without notice. Delivery of technical support services subject to change without notice. Not responsible for typographical errors. © 2010 Ingram Publishing, 110310

## MICROTEK INTERNATIONAL, INC.

No. 6 Industry East Road 3, Science-Based Industrial Park, Hsinchu 300, Taiwan  
Tel: 886-3-577-2155 Fax: 886-3-577-2598 <http://www.microtek.com>

