

ArtixScan DI 6240S

Speedy, Durable, and Silent Sheetfed Document Scanner



2

CCD

**Ultrasonic
Double-feed
Detection**

40 | 80

ppm | ipm
Scanning Speed

**Duplex
Scanning**

100

Pages

5000

Scans
Daily Duty Cycle

65"

Long Page

Programmable
6

Function Buttons

Additional
**USB
Hub**

Ability

**Plastic
Card**

Scan

ArtixScan DI-series

ArtixScan DI 6240S

Intuitive and Easy-to-access Scanner Buttons

The scanner is equipped with 3 physical buttons (Select, Scan/Stop, and Favorite) and a LED display at the top of the scanner, used to automate a number of predefined scan jobs, such as scanning to a file, sending images to your printer or e-mail accounts, and scanning for OCR. By just pressing a button, you can activate the function associated with it (F1, F2, F3, F4, F5, or Favorite) configured through the software, simplifying your operations and getting your scanning jobs done quickly.



Rapid Scanning with Low-noise Design

The scanner has dual CCD color sensors and a 600 dpi optical resolution. It can produce 40 ppm / 80 ipm A4-sized scans at 300 dpi in color, grayscale, and black-and-white, delivering excellent document sharpness needed in all your scanning tasks. With its low-noise design, the scanner is able to provide a quiet and pleasant working environment, especially perfect for the most of high-volume workplaces.



Additional USB Hub Ability


The ArtixScan DI 6240S with embedded USB hub allows you to connect an external USB device such as Microtek's flatbed scanners, storage devices, and hard drives, using Universal Serial Bus technology to a single USB port.



Superb Document Handling Capability

The scanner lets you scan a wide variety of documents, including standard-size papers, invoices, postcards, and various cards such as business cards, ID cards, and credit cards, improving your productivity and saving your money in requirements of additional accessories. Its high-volume tray, which can be fed with a stack of up to 100 sheets of papers or 2 pieces of cards at a time.


Foldable Trays Perfect for Tight Spaces

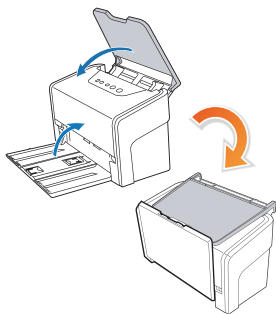

The ArtixScan DI 6240S is not only with an elegant appearance, it is also bearable and durable. Furthermore, its foldable trays brings you a lot of convenience when using it in a limit space, and it also makes storing and handling more easier when the scanner is not in use.

Valuable Software Pack

Intuitive Microtek's ScanWizard DI offers you an all-in-one control panel with rich functionality. It lets you easily execute daily essential scan tasks, even without having to initiate a scanning session on the screen. Microtek's DocWizard, one scanning management software, is specifically designed for document scanners, with scanning, image processing, and file or book managing functions in straightforward operations to meet all professional digitizing needs.

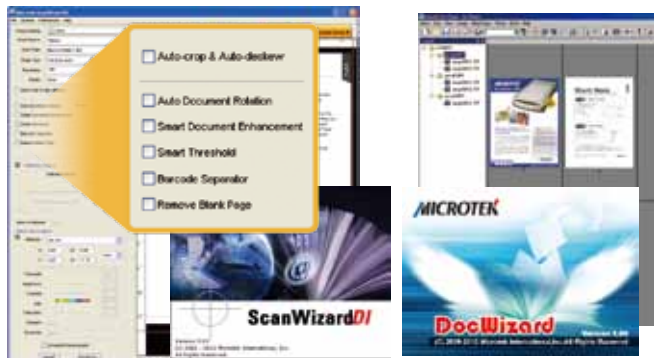

Specifications

Scanner Type

Desktop sheetfed color scanner

Image Sensor

CCD (x 2)

Light Source

LED

Color Modes

24-bit color, 8-bit grayscale, 1-bit b&w (external)

Interface

Hi-Speed USB 2.0

Resolution

600 dpi

Feeder Capacity

100 sheets

Scanning Area

Max : 8.5" x 65" (216 mm x 1651 mm)

Min : 1" x 1" (25.4 mm x 25.4 mm)

Scanning Speed

40 ppm (Simplex) / 80 ipm (Duplex), at 300 dpi, A4/color, grayscale, line art

Paper Weight

8 to 32 lbs (30.08 to 120.32 g/m²)

Paper Size

Max: 8.85" x 65" (225 mm x 1651 mm)

Min: 2.75" x 3.149" (70 mm x 80 mm)

Duty Cycle

5,000 pages per day

Separation Roller Life

150,000 scans

Feed Roller Life

100,000 scans

Software Driver

TWAIN

Dimensions (L x W x H)

7.08" x 12.60" x 7.87" (180 mm x 320 mm x 200 mm)

Weight

9.26 lbs. (4.2 kg.)

Environment

Operating temperature:

41° to 104°F (5° to 40°C)

Relative humidity: 10% to 85%

System Requirements

- CD/DVD-ROM drive (for installing software)
- Color display with 24-bit output capability
- 1 GB RAM or more (2 GB is recommended)
- Intel Core2 Duo Processor at 2.1 GHz or above PC with a SATA2/SATA3 at 7200 rpm HDD or SSD (recommended) ; Intel-Based Mac computer
- Windows XP/Vista/Windows 7 ; Mac OS X 10.6 through 10.7

Included Software

- Microtek® ScanWizard™ DI (PC)
- Microtek® DocWizard (PC)
- Microtek® ScanPotter (MAC)*
- ABBYY FineReader® Sprint OCR (PC/MAC)
- ABBYY Business Card Router (PC)
- InterVideo MediaOne Gallery™ (PC)
- Adobe® Acrobat® Reader (PC/MAC)

* Microtek ScanPotter (Mac) is currently under development. It will be supported with the scanner soon.



MICROTEK INTERNATIONAL, INC.

No. 6 Industry East Road 3, Science-Based Industrial Park, Hsinchu 300, Taiwan

Tel: +886-3-577-2155 Fax: +886-3-577-2598 <http://www.microtek.com>

© 2012 Microtek. Microtek, ScanMaker, ArtixScan and ScanWizard are trademarks or registered trademarks of Microtek International, Inc. All other brands, product names and logos herein are trademarks or registered trademarks of their respective holders. Specifications, software bundles and accessories are subject to change without notice. Delivery of technical support services subject to change without notice. Not responsible for typographical errors. © 2012 Shutterstock Publishing. 20120528

For more details on product, please contact your local Microtek sales or dealers.

MICROTEK
SCAN THE WORLD