


Powerful Scanning Software

ScanMaker 1000XL Plus offers you a variety of choices on scanning software. You may pick up either one from these choices to finish your scans based on your needs.

• Microtek ScanWizard Pro (PC)

This is an advanced scanner controller program that provides many powerful, professional-level features for scanning. ScanWizard Pro includes the Microtek Scanner ICC Profiler (MSP) program, which allows users to calibrate the scanner and generate the appropriate ICC color profile to ensure color consistency and accuracy during the scanning process. ScanWizard Pro also features two color spaces, allowing users to work in the Native CMYK / RGB mode, as well as in the intuitive LCH (Lightness, Chroma, Hue) mode.

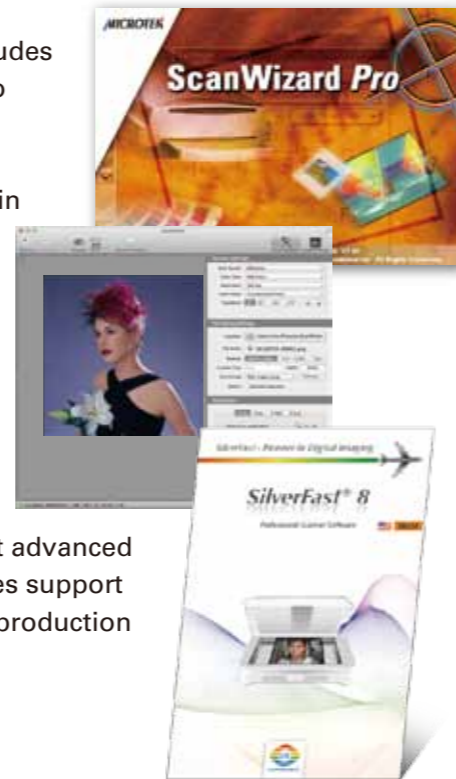

• Microtek ScanPotter (Mac)

The ScanPotter is developed exclusively for Microtek scanners running on a Mac system. Its single-page and overall control panel provides users a simple and straightforward control over the scanning process.

• LaserSoft SilverFast AI Studio (PC/Mac)

The SilverFast AI Studio is a leading scanning software, which can meet advanced and sophisticated needs for scanned images. Its professional capabilities support precise and refined color correction and image adjustment to critical reproduction requirements in an efficient and productive workflow.



SilverFast® Ai Studio

Specifications

Scanner Type
Desktop color flatbed scanner

Image Sensor
CCD

Light Source
Tri-wavelength LED

Resolution
Optical: 3200 x 6400 dpi

Optical Density
4.2 Dmax

Scanning Modes
48-bit color, 16-bit grayscale, 1-bit b&w

Scanning Area
Reflective: 12" x 16.9" / 304.8 x 429.26 mm
Transparency: 12" x 16" / 304.8 x 406.4 mm

Connectivity
Hi-Speed USB (USB 2.0)

Dimensions (LxWxH)
24.7" x 14.8" x 5.1" / 627.5 x 375.9 x 129.5 mm
24.7" x 14.8" x 7.1" / 627.5 x 375.9 x 180.5 mm (w/ TMA)

Weight
26.4 lbs. / 12 kg
35.4 lbs. / 16.1 kg (w/ TMA)

Environment
Operating Temperature:
50°F to 104°F / 10°C to 40°C

System Requirements

- CD/DVD-ROM drive (for installing software)
- Color display with 24-bit color output capability
- 512 MB RAM or more
- Pentium IV PC or higher with USB 2.0 port; Intel-based Mac computer with built-in USB port
- Windows XP, Vista, 7 or 8; Mac OS X 10.6 or later

Included Software

- Microtek® ScanWizard™ Pro (PC)
- Microtek® Scanner ICC Profiler (PC)
- Microtek® LAN Wizard (PC)
- Microtek® ScanPotter (Mac)
- InterVideo MediaOne Gallery™ (PC)
- Adobe® Acrobat® Reader (PC)
- ABBYY FineReader® Sprint OCR (PC/Mac)
- Adobe® Photoshop Elements (PC/Mac)
- LaserSoft® SilverFast® Ai Studio (PC/Mac)*

* The scanning software you received depends on the configuration of the scanner you purchased.

For more details on product, please contact your local Microtek sales or dealers.



MICROTEK INTERNATIONAL, INC.
No. 6 Industry East Road 3, Science-Based Industrial Park, Hsinchu 30075, Taiwan
Tel: +886-3-577-2155 Fax: +886-3-577-2598 <http://www.microtek.com>

© 2014 Microtek. Microtek, ScanMaker, ArtixScan and ScanWizard are trademarks or registered trademarks of Microtek International, Inc. All other brands, product names and logos herein are trademarks or registered trademarks of their respective holders. Specifications, software bundles and accessories are subject to change without notice. Delivery of technical support services subject to change without notice. Not responsible for typographical errors. © 2012 Ingram Publishing, 20140130



ScanMaker 1000XL Plus

Large Format A3 Graphic Scanner

Versatile Design
and High-value for
the Professionals




ScanMaker 1000XL Plus




Flatbed scanner with an extra-large A3 scan bed and an intuitive Smart-touch button

The tabloid-size scan bed of the ScanMaker 1000XL Plus lets you easily scan oversized originals, contact sheets, large pieces of art, mechanical blueprints, and X-rays.

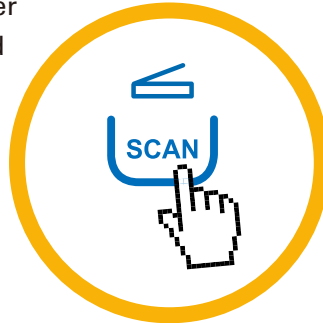

Smart-touch Button

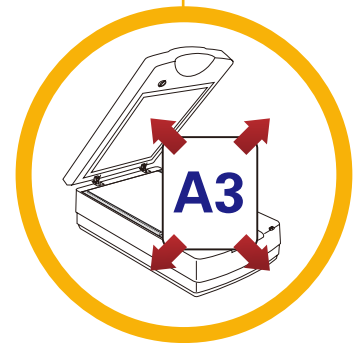

A3 Scan Bed


Plus, one Smart-touch button (SCAN) located at the front of the scanner provides you with a quick and easy access way to capture images that can be automatically saved as files or sent to another application for further processing later.



Transparent Media Adapter

Transparent Media Adapter (TMA) support - Ideal for scanning different sizes of film

The ScanMaker 1000XL Plus contains a larger-format (12" x 16") TMA (Transparent Media Adapter) that allows you to scan various transparent films easily. Used together with specially designed film templates, it is simple to accommodate a variety of film sizes, such as 35mm mounted slides, 35mm filmstrips, 4" x 5" film, and medium format film from 6 x 4.5-cm up to 6 x 17-cm panoramic film.

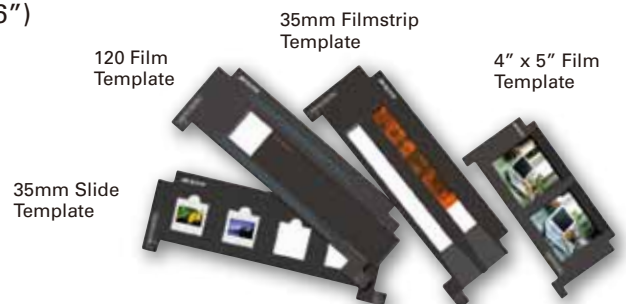

Superior 3200 x 6400 dpi optical resolution, 48-bit color depth and 4.2 Dmax

The ScanMaker 1000XL Plus has a CCD with resolution that reaches up to 3,200 pixels per inch. With the built-in 48-bit ADC (Analog to Digital Converter), the ScanMaker 1000XL Plus can convert originals to digital data with high fidelity format. It is capable of delivering full 48-bit depth color for richer and smoother tonal values; also, an optical range of 4.2 Dmax allows users to capture details in highlight and shadow areas, as well as accurately represents gradation and natural color from originals without sacrificing details of the image.



Original Image



3.7 Dmax



4.2 Dmax