

ScanMaker i280

Consumer and SOHO Scanner



CCD

4800
DPI

48-bit
Color

7
Buttons

A4
Size

LED








Warm-up
Free

Super
Slim

Zero
Boundary

ScanMaker i280

7 Smart-Touch Function Buttons

-  **Cancel / Setup** - Set scanning preferences or cancel unwanted scans.
-  **Scan** - Instantly scan to file or an application.
-  **Copy** - Make color copies of your favorite photos or prints.
-  **Email** - Stay in touch! Email photos to family and friends.
-  **OCR** - From paper to digital in one easy step.
-  **PDF** - Scan the image and save it in the Adobe Acrobat PDF format.
-  **Custom** - Use this for faxing, power saving and more.



Microtek patented side-to-side Zero Boundary™ scan bed

The design of the side-to-side Zero Boundary™ scan bed enables faster image capturing for books or magazines. Instead of flipping pages by pages, each time, users can simply move the targets from left to right for continual non-stop scanning.



Zero Boundary design at left margin

Zero Boundary design at right margin




User friendly and easy-to-access software


With brand new developed ScanWizard EZ (PC) and ScanPotter (Mac) scanner software, you can find variety of scanning solutions for your scans. Both novices and experienced scanner users can find them productive and easy to use.



The best solution for scanning thick books

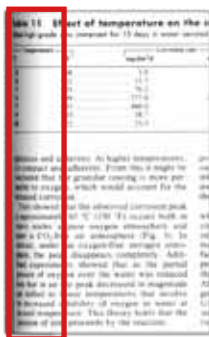

Conventional scanner

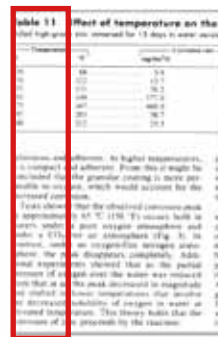

ScanMaker i280

The ScanMaker i280 incorporates Microtek's Zero Boundary™ design, which extends the scan area as closer to the edges of the scanner to make scan bound pages in a book easier. With Zero Boundary™, the scanner can eliminate the problems of scanning bound pages with text and pictures close to the inner

margin of a book or magazine. No more distortions, no more blurs. You get easy-to-read texts and clear images across the entire page.

Super-slim!

CCD & LEDs bring up superb image quality in a slim design

The ScanMaker i280 is built by using Microtek's EDGE™ design, fitting high-quality CCD scanning technology into a slim profile. You get the slim and stylish appearance without giving up the advantages of CCD scanning -- like superior image quality and better color depth capabilities not offered by other slim scanners.

Furthermore, constructed LED light source requires no warm-up time before carrying out the scan, which prevents the waste of time and conserves money of energy. The best of all, with the stable performance generated by a scanner with LEDs, the image quality will remain consistent even after being used for a certain period of time.

Exclusive Microtek's ColoRescue™ restores faded color

The ScanMaker i280 is equipped with Microtek's exclusive ColoRescue™ technology, which brings faded colors back to life for more vibrant images. With a single click, you can return faded photos to their original brilliance.



Specifications

Scanner Type

Desktop color flatbed scanner

Image Sensor

CCD

Light Source

LED

Color Modes

48-bit color, 16-bit grayscale, 1-bit b&w

Scanning Method

Color, grayscale, and black-and-white in a single scanning pass

Optical Resolution

4800 x 9600 dpi

Scanning Speed

7 sec, at 300 dpi, A4/color

Scanning Area

Reflective: 8.5" x 11.7" (216 mm x 297 mm)

Transparent: 1.25" x 8" (31.75 mm x 208 mm)

Interface

Hi-Speed USB 2.0

Dimensions (L x W x H)

18.0 x 9.8" x 1.75" (457 mm x 248 mm x 44.5 mm)

Weight

4.6 lbs. (2.1 kg.)

Environment

Operating temperature: 50° to 104°F (10° to 40°C)

Relative humidity: 20% to 85%

System Requirements

PC

- CD/DVD-ROM drive (for installing software)
- Color display with 24-bit color output capability
- 512 MB RAM or more
- Pentium IV PC or higher with USB 2.0 port
- Windows XP, Vista, 7 or 8

Mac

- CD/DVD-ROM drive (for installing software)
- Color display with 24-bit color output capability
- 1 GB of RAM or more
- Intel-Based Mac computer with built-in USB port
- Mac OS X 10.6 or later

Included Software

- Microtek® ScanWizard™ EZ (PC)
- Microtek® ScanPotter (Mac)
- ABBYY FineReader® Sprint OCR (PC/Mac)
- InterVideo MediaOne Gallery™ (PC)
- Adobe® Acrobat® Reader (PC)



MICROTEK INTERNATIONAL, INC.

No. 6 Industry East Road 3, Science-Based Industrial Park, Hsinchu 300, Taiwan

Tel: +886-3-577-2155 Fax: +886-3-577-2598 <http://www.microtek.com>

© 2013 Microtek. Microtek, ScanMaker, ArtxScan and ScanWizard are trademarks or registered trademarks of Microtek International, Inc. All other brands, product names and logos herein are trademarks or registered trademarks of their respective holders. Specifications, software bundles and accessories are subject to change without notice. Delivery of technical support services subject to change without notice. Not responsible for typographical errors. © 2012 Ingram Publishing. 20131230

For more details on product, please contact your local Microtek sales or dealers.

MICROTEK
SCAN THE WORLD